

These instructions describe the Backup Camera / Sensor montage kit. Read these instructions thoroughly before beginning the procedure.

Part List

POZ	PART NUMBER	DESCRIPTION	QTY
1	057630	BOLT	2
2	414391200	CAMERA COVER SHEET	1
3	172380354	CAMERA	1
4	424391030	SENSOR	1

**NOTICE**


Use all applicable safety precautions while working on, around, or under any machinery.

**WARNING**


Failure to follow all safety precautions when working on this equipment could cause death, serious injury, or damage to property and equipment.

**NOTICE**


The bolts used in the assembly group must have a tightening torque of 22 Nm.

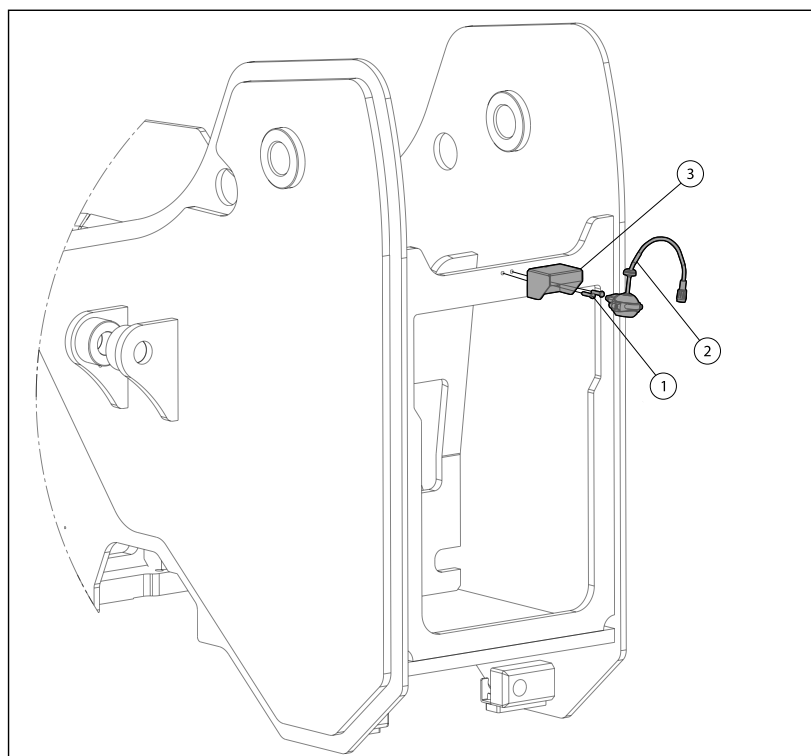



Secure part (3) to the holes shown on the chassis. Secure part (3) by tightening part (1) to 9 Nm torque. Install and secure part (2).

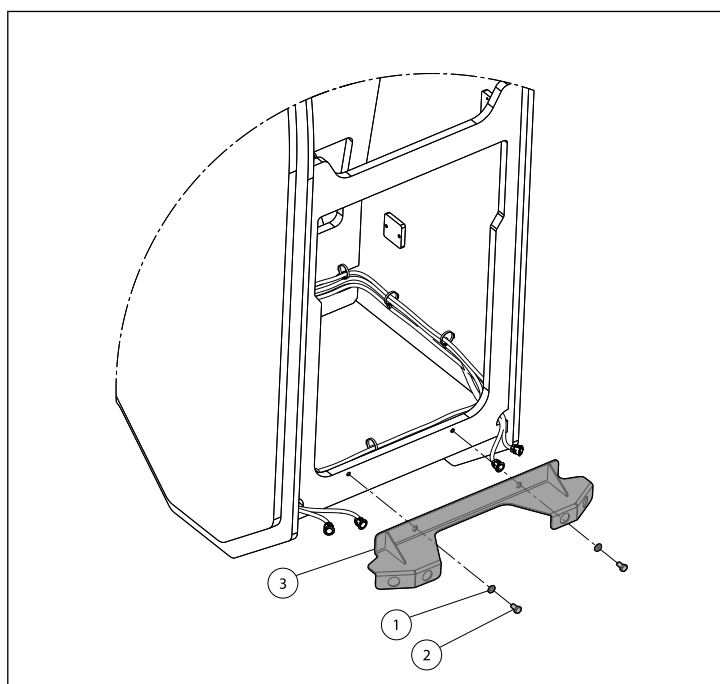

Insert part (3) into the holes shown on the chassis. Insert part (1) into part (2) and tighten part (3) with 22 Nm torque.

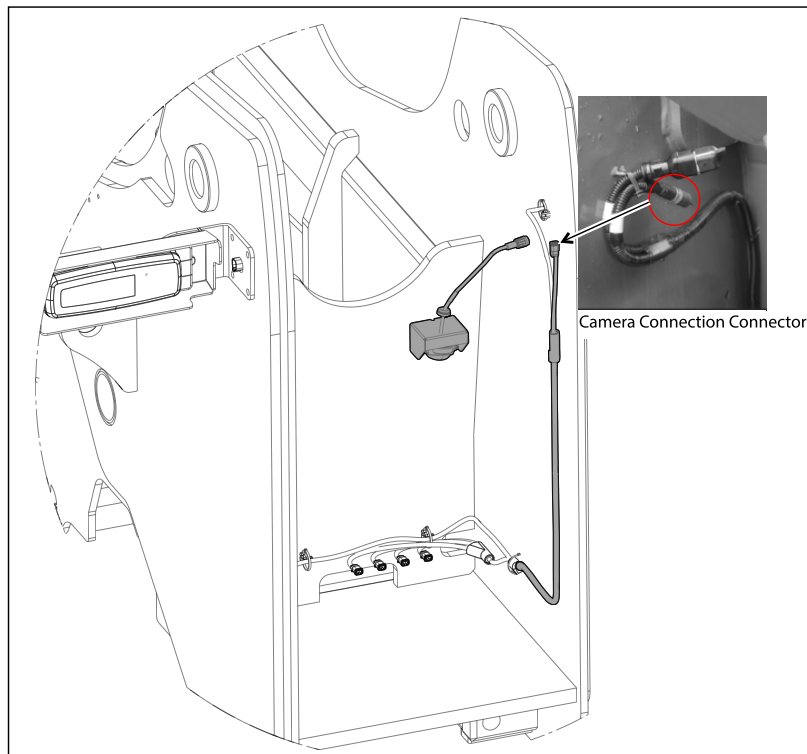

Connect the connectors shown in the figure.

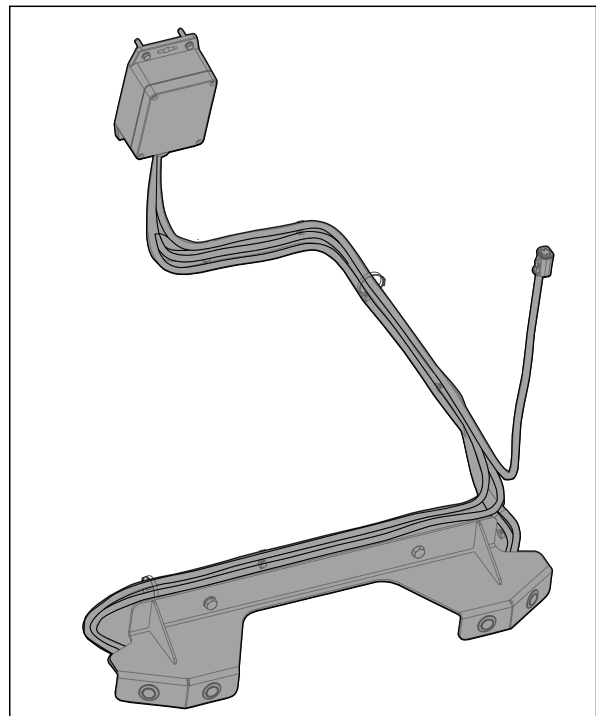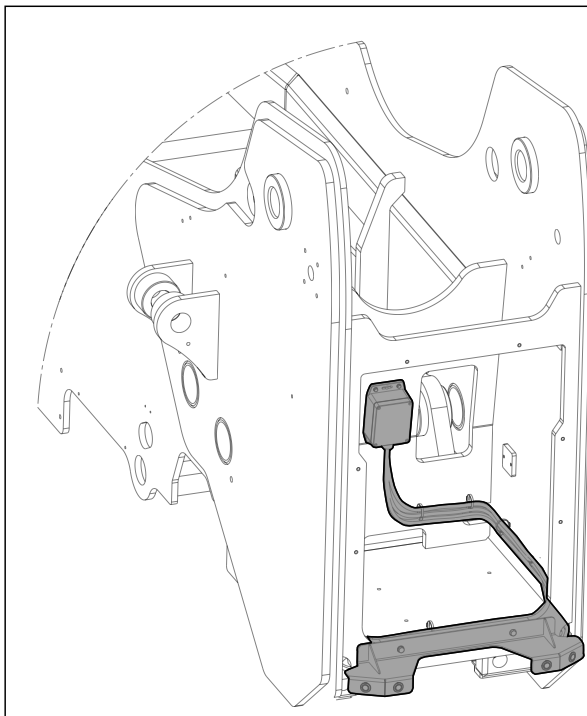

Connect the connectors shown in the figure.

