

These instructions describe the Front Rear Road Lights montage kit. Read these instructions thoroughly before beginning the procedure.

Part List

POZ	PART NUMBER	DESCRIPTION	QTY
1	542390411	ROCKER SWITCH, HAZARD WARNING	1
2	542390402	ROCKER SWITCH, MASTER LIGHT	1
3	413390045	REAR ROAD LIGHT	1
4	412390020	FRONT ROAD LIGHTS	1
5	407244903	LEVER, SIGNAL & WIPER	1

**NOTICE**


Use all applicable safety precautions while working on, around, or under any machinery.

**WARNING**


Failure to follow all safety precautions when working on this equipment could cause death, serious injury, or damage to property and equipment.

**NOTICE**



The bolts used in the assembly group must have a tightening torque of 70 Nm.

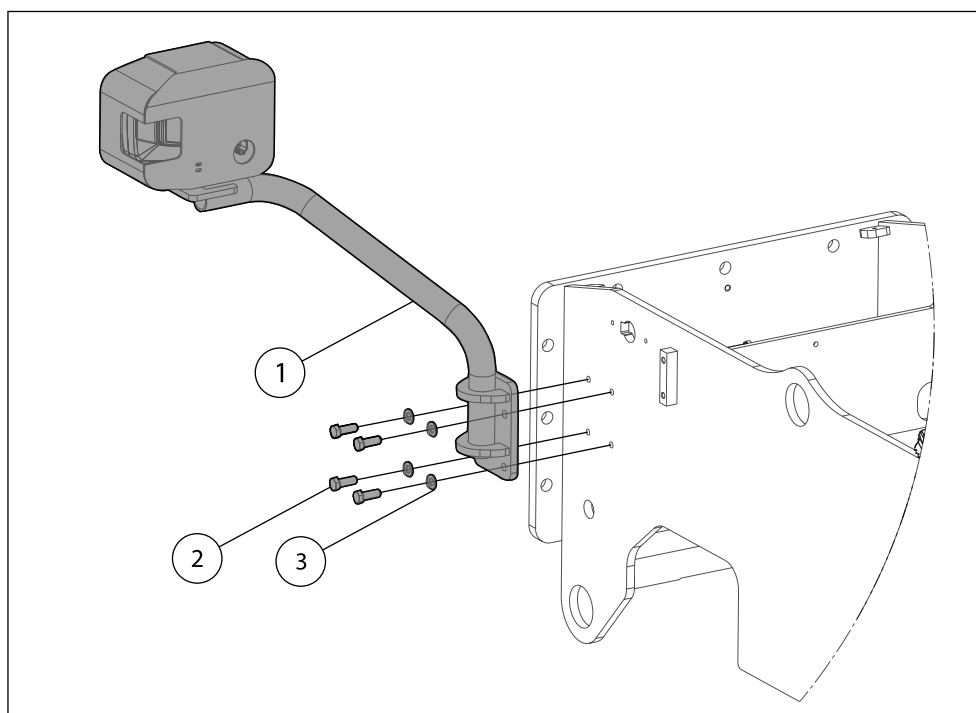

Secure part number (1) into the holes indicated. Then insert washer number (3) into bolt number (2) and tighten the holes with 70 Nm torque.


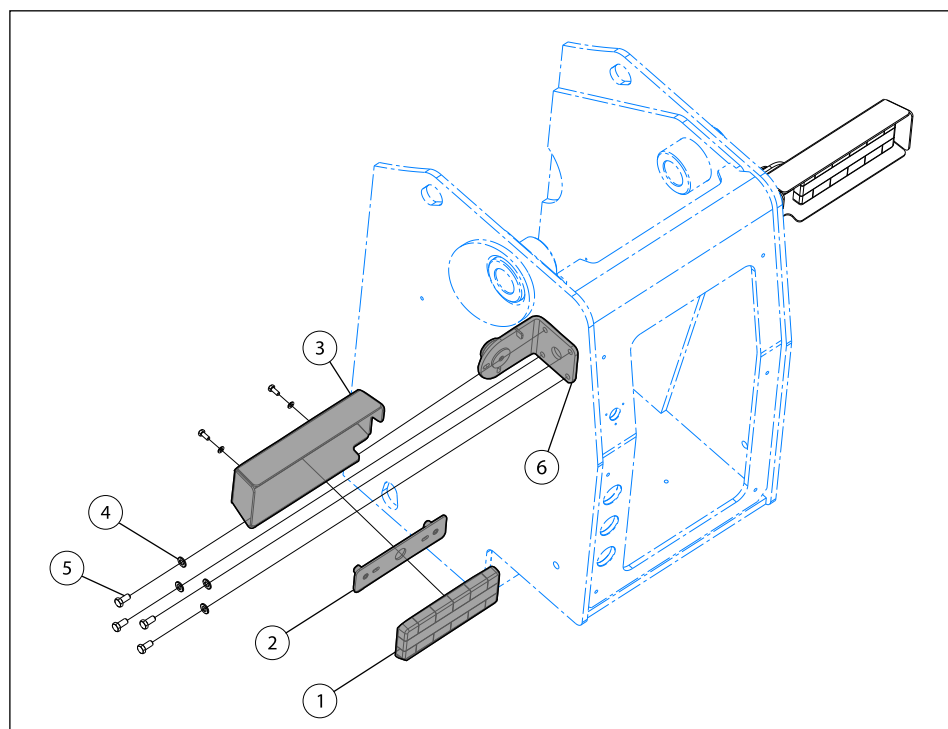


Secure part (1) to part (2), then attach it to part (3) and secure it with a bolt. Secure part (6) in place and attach washer (4) to bolt (5) along with the stop lamp you have assembled, and tighten it to the holes shown in the diagram with 70 Nm torque.

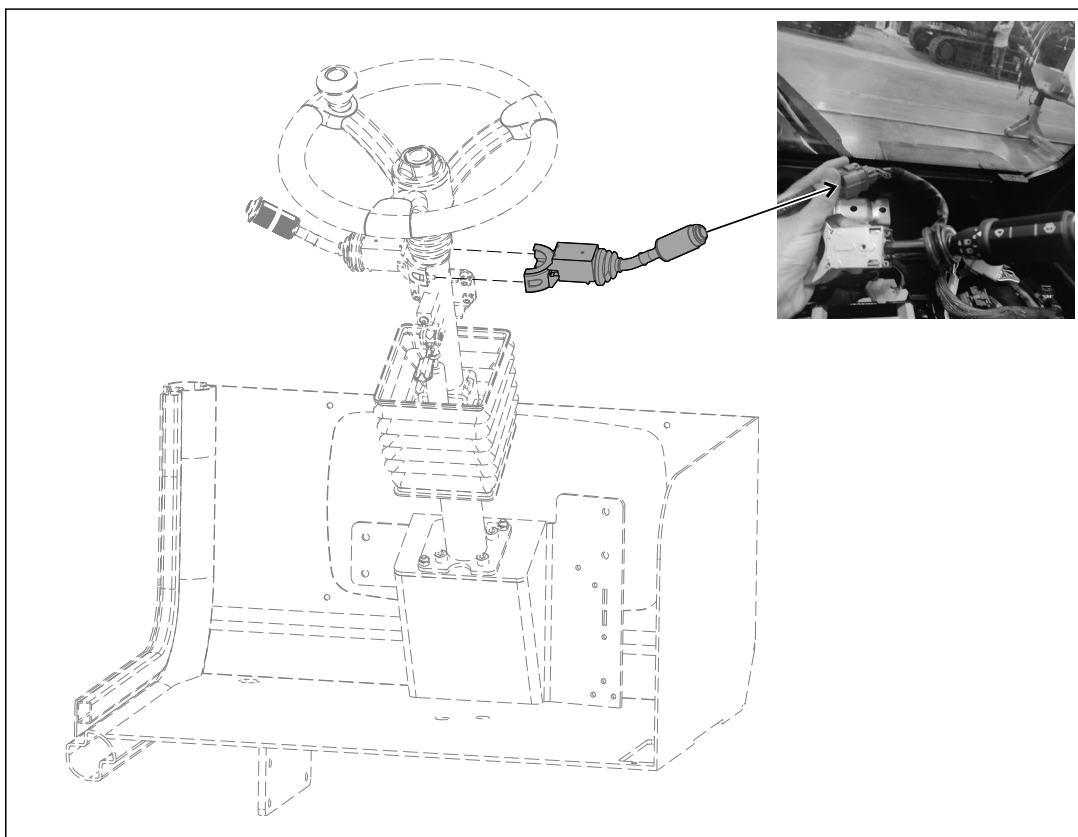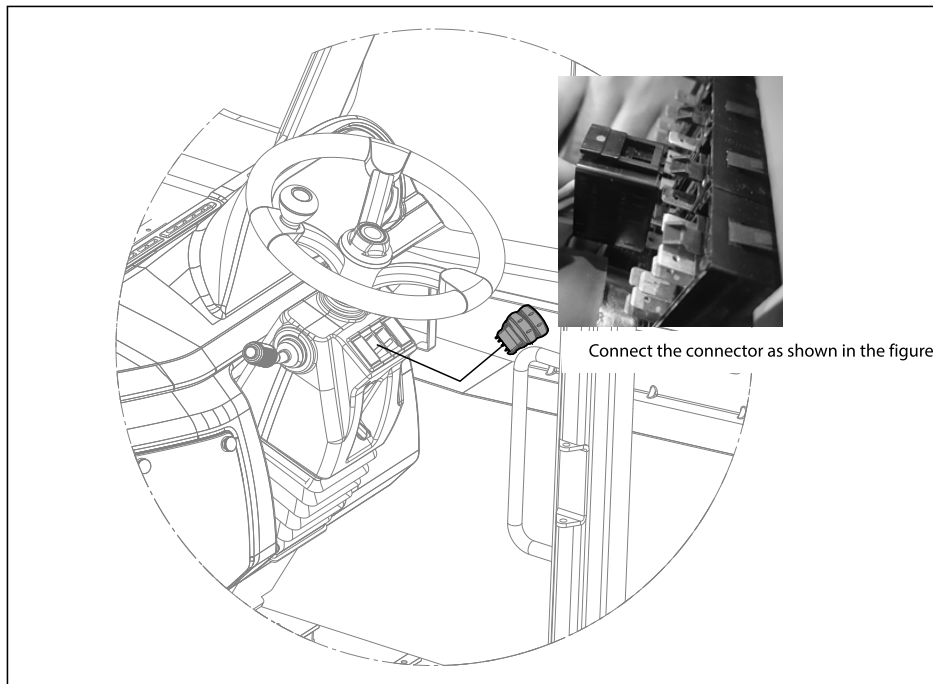

An open cab differential group signal lever will be added.

The connector location is ready. Connect the signal lever to the connector, tighten the bolts and secure it.

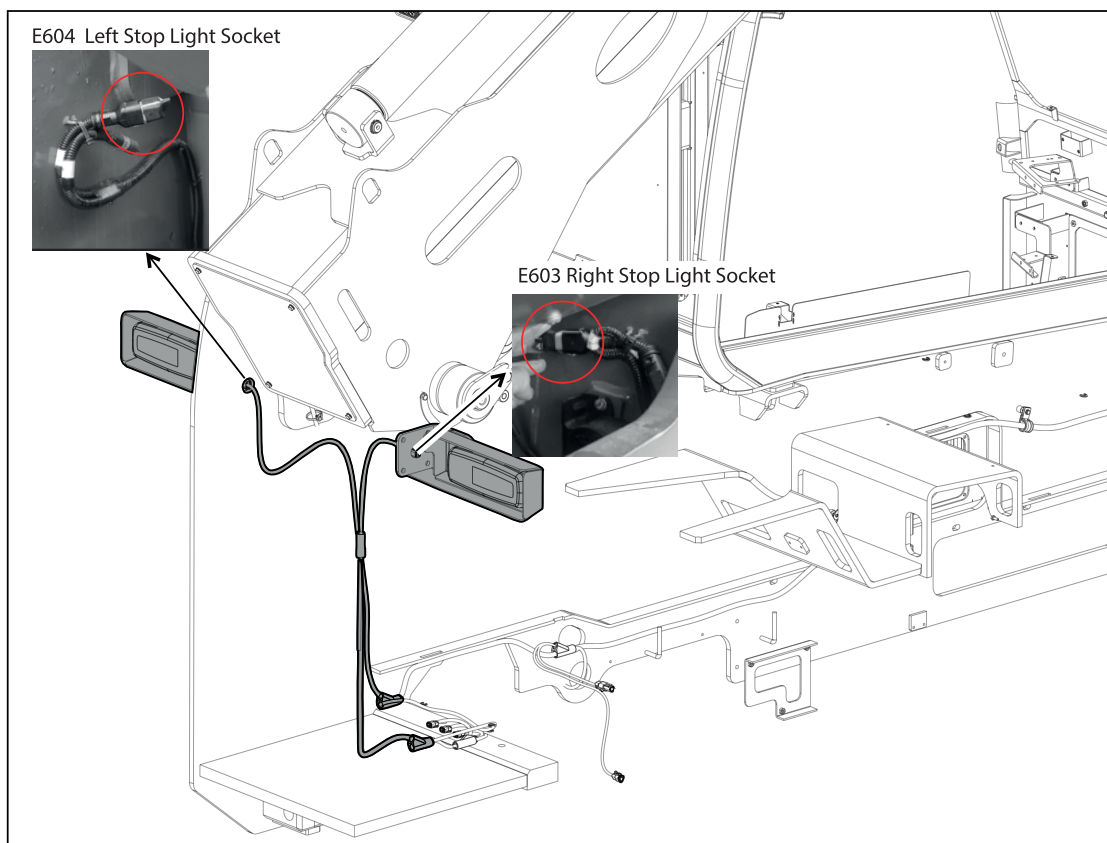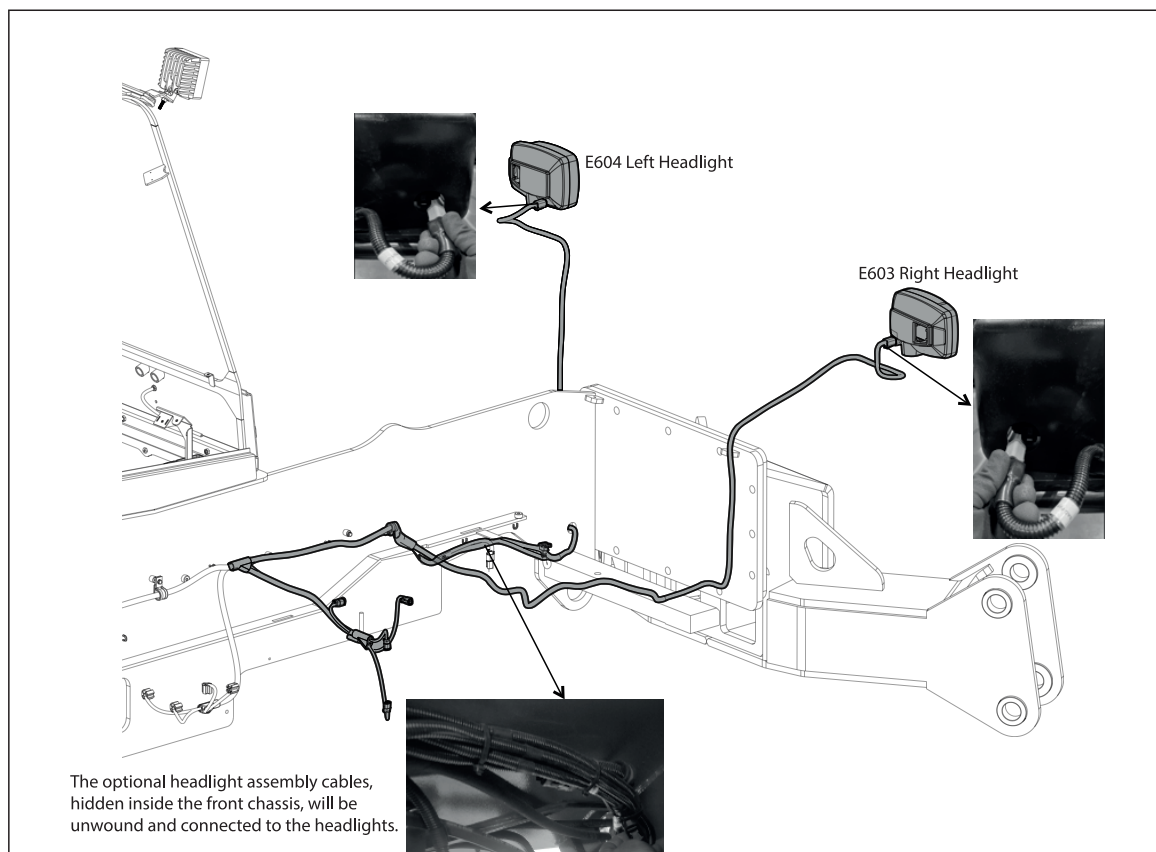

Electrical wiring should be done as shown in the diagrams.