

These instructions describe the mudguard montage kit. Read these instructions thoroughly before beginning the procedure.

Part List

POZ	PART NUMBER	DESCRIPTION	QTY
1	412771017	MUDGUARD RIGHT COMP.	1
2	414771300	MUDGUARD	4
3	60011025	BOLT	16
4	36810	NUT	16
5	409931030	WASHER	16
6	412771016	MUDGUARD BRACKET	4
7	412771018	MUDGUARD LEFT COMP.	2

**NOTICE**

Use all applicable safety precautions while working on, around, or under any machinery.

**WARNING**


Failure to follow all safety precautions when working on this equipment could cause death, serious injury, or damage to property and equipment.

**NOTICE**

Tighten the M16x60 bolts used in the assembly to a torque of 300 Nm.

Tighten the M10x25 bolts to a torque of 72 Nm.

Park the machine on a level and stable surface, level the machine, retract the boom completely, put the gearbox in the (N) NEUTRAL position and engage the parking brake. Ensure sufficient clearance and switch off the machine.

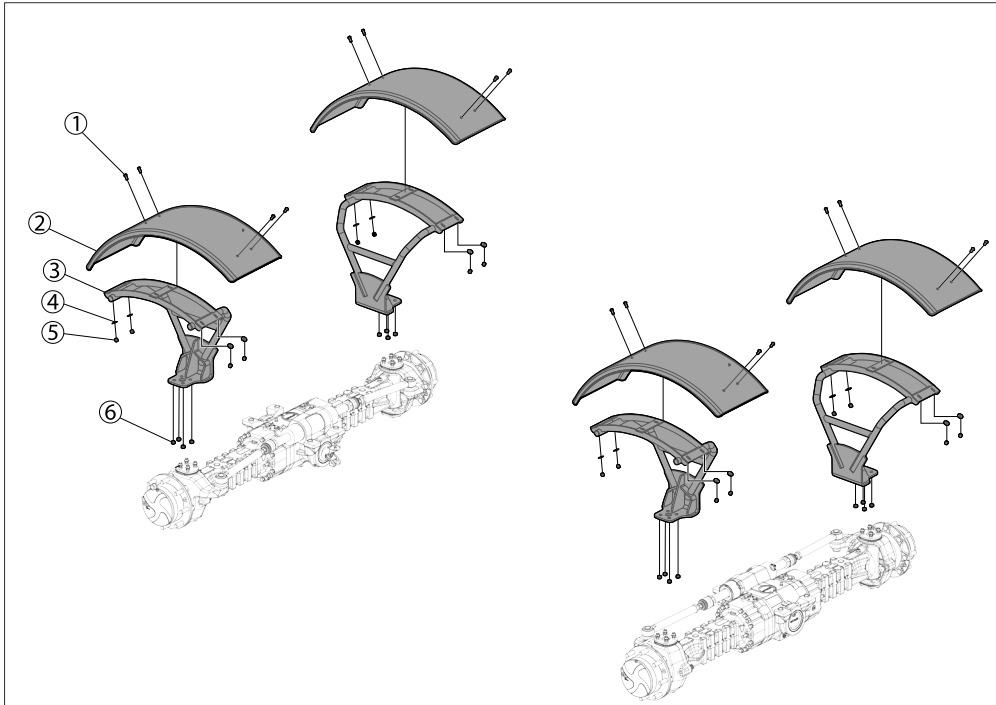

Tighten bracket (3) to the location shown on the axle with nut (6) to a torque of 72 Nm. Place fender (2) on top of bracket (3), pass bolts (1) through the holes on the fender, place washer (4) on the bolts from under the bracket, then attach nut (5) and tighten to a torque of 72 Nm.

