

These instructions describe the Work Lights montage kit. Read these instructions thoroughly before beginning the procedure.

Part List

POZ	PART NUMBER	DESCRIPTION	QTY
1	X30391104	WORK LAMP	3
2	542390410	ROCKER SWITCH, FRONT W.L	1
3	542390408	ROCKER SWITCH, REAR W.L	1

**NOTICE**

Use all applicable safety precautions while working on, around, or under any machinery.


**WARNING**

Failure to follow all safety precautions when working on this equipment could cause death, serious injury, or damage to property and equipment.


**NOTICE**


The bolts used in the assembly group must have a tightening torque of 75 Nm.

Park the machine on a level and stable surface, level the machine, retract the boom completely, put the gearbox in the (N) NEUTRAL position and engage the parking brake. Ensure sufficient clearance and switch off the machine.

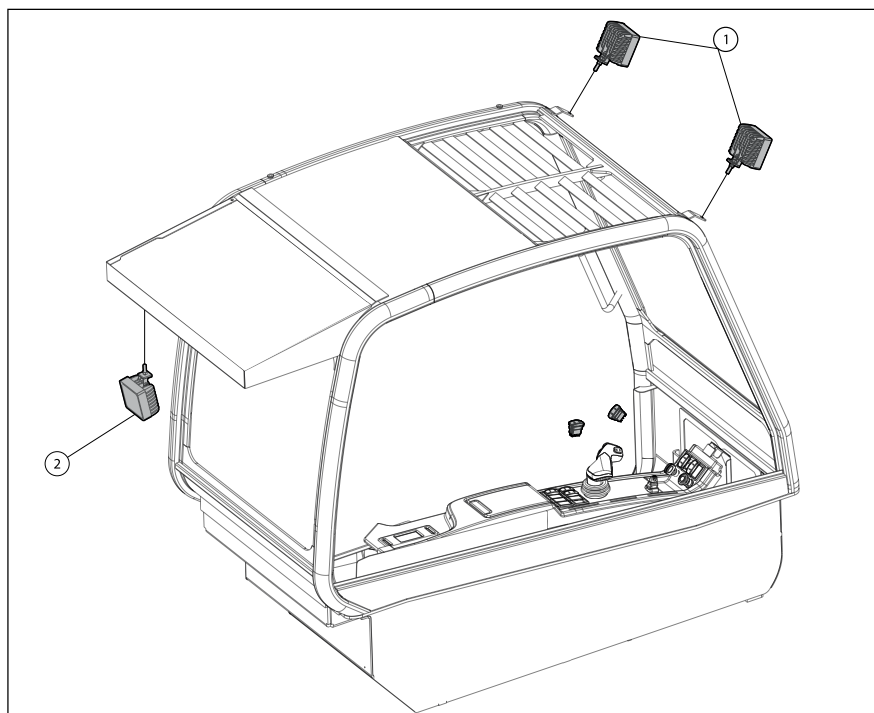


To install the lighting lamp mounted on top of the cabin, install the work lamps shown in the diagram to the location shown on top of the cabin (1), (2) tighten the M12 nut on the lamp to a torque of 75 Nm. Install the switch number 3 (Rear lamp switch) to the location shown in the diagram, install the switch number 4 (Front lamps switch) to the location shown and check that it is working.

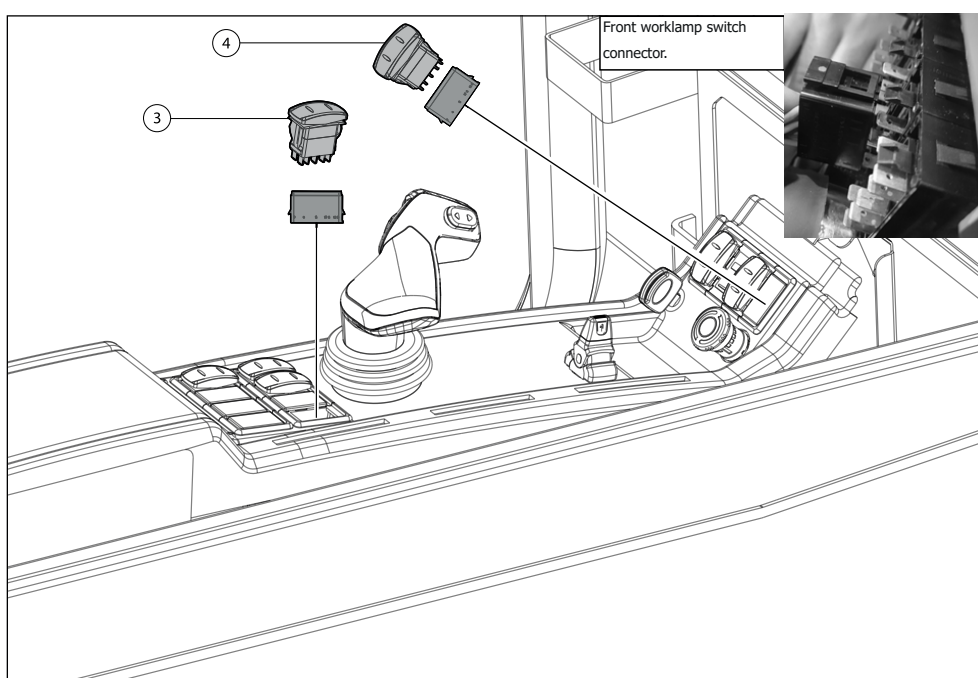

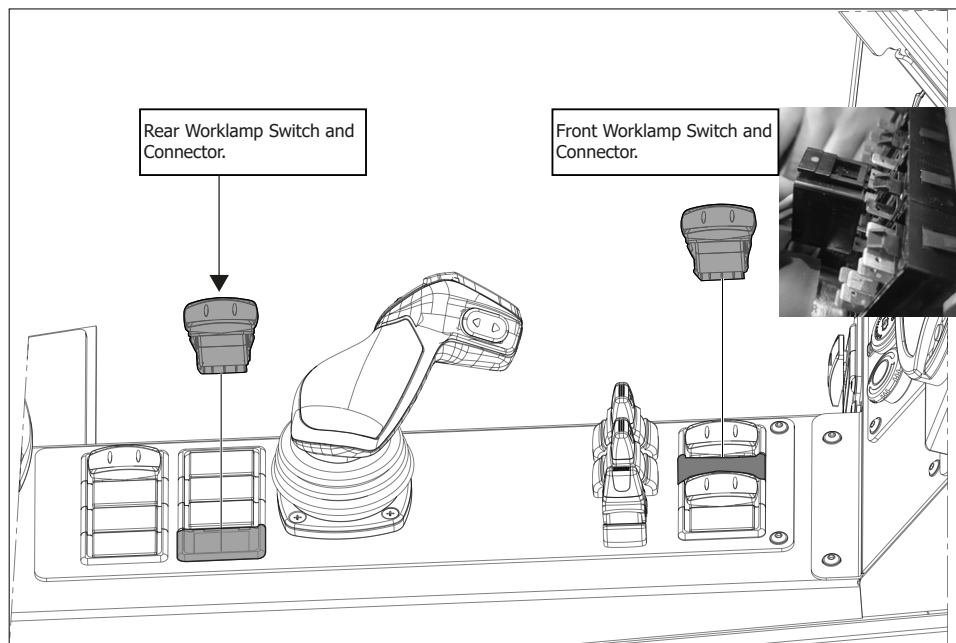

Open cap switch arrangements should be made as shown in the picture.

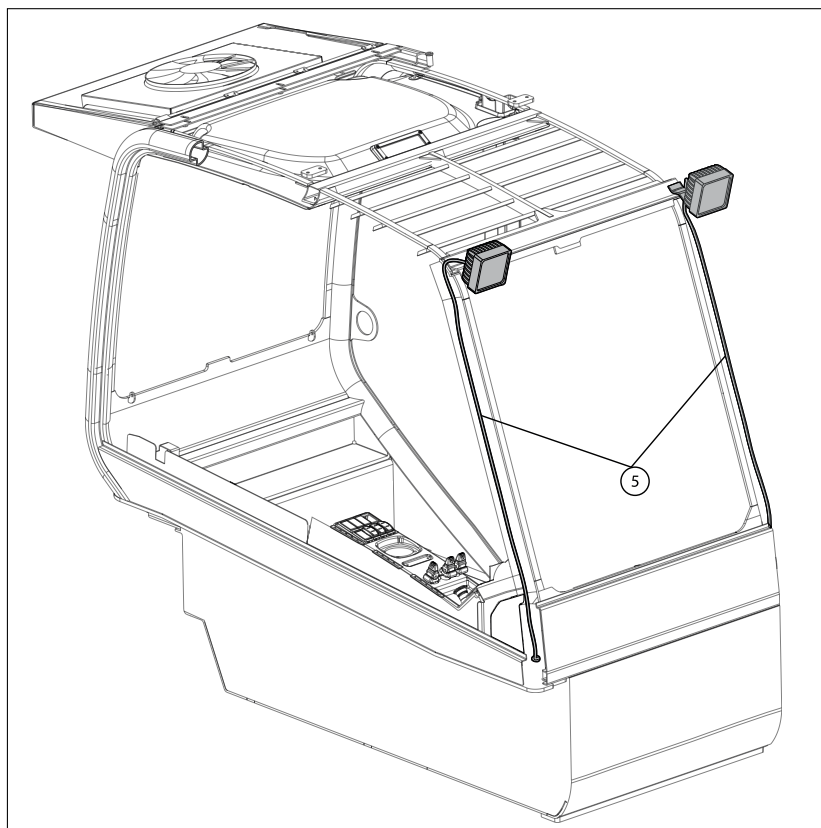

Connect the electrical cables to the work lights mounted on the cap as shown in the diagram.

